


ACCESSORIES MUFFLERS

MUFFLERS

Mufflers screw directly into the primary and secondary exhaust ports. **Note** - control valves also have secondary exhaust ports.

These mufflers are designed for intermittent use. For continuous operation contact factory.

If it is necessary to pipe the exhaust away from the motor, care must be taken to adequately size the pipework to avoid build up of back pressure in the system. If in doubt consult our Applications Department.

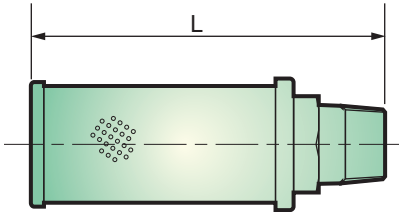

	110 PRIMARY	110 SECONDARY	210 PRIMARY	210 SECONDARY	310	410	510	610
SIZE	19.05	12.70	25.40	19.05	31.75	31.75	38.10	50.80
	3/4"	1/2"	1"	3/4"	1-1/4"	1-1/4"	1-1/2"	2"
L	171.45	139.7	203.2	171.45	209.55	209.55	336.55	463.55
	6.75	5.5	8.0	6.75	8.25	8.25	13.25	18.25

Normally supplied in kit form complete with fittings.

